

ALARM CHRONOGRAPH TIMER

Cal.8M25 (SDT...)

FEATURES

■ TIME

Hour and minute hands.

■ ALARM

Can be set on a 12-hour basis.

■ COUNTDOWN TIMER

Up to 60 minutes can be set in minutes.

■ CHRONOGRAPH

Can measure up to 60 minutes in 1/5 seconds.

■ ZERO MATCH

Use the "Ø MATCH" mode to put both hands in the 12 o'clock position.

■ TIME

Time setting

CROWN:

1. Turn at NORMAL POSITION to set MODE INDICATOR to "TIME" or "ALARM ON".
2. Pull out to FIRST CLICK.

BUTTON "A": Press repeatedly to set minute hand.**

BUTTON "B": Press repeatedly to set hour hand.**

CROWN: Push back into NORMAL POSITION.

■ CHRONOGRAPH

CROWN:

Turn at NORMAL POSITION to set MODE INDICATOR to "CHRONO".

BUTTON "A": Start / Stop / Restart.

BUTTON "B": Split / Split release / Reset.

■ ALARM

Alarm time setting

CROWN:

Turn at NORMAL POSITION to set MODE INDICATOR to "ALARM SET".

BUTTON "A": Press repeatedly to set minute hand.**

BUTTON "B": Press repeatedly to set hour hand.**

Alarm engagement/disengagement

CROWN:

- To engage, turn to set MODE INDICATOR to "ALARM ON".
- Alarm rings at the designated time for 20 seconds.
- To stop it, press **BUTTON "A"** or **"B"**.
- To disengage, turn to set MODE INDICATOR to "TIME".



■ ZERO MATCH

CROWN:

1. Turn at NORMAL POSITION to set MODE INDICATOR to "Ø MATCH".
2. Pull out to FIRST CLICK.

BUTTON "A": Press repeatedly to reset minute hand to the 12 o'clock position.**

BUTTON "B": Press repeatedly to reset hour hand to the 12 o'clock position.**

CROWN: Push back into NORMAL POSITION.

■ COUNTDOWN TIMER

Timer setting

CROWN:

Turn to set MODE INDICATOR to "TIMER".

BUTTON "B": Press repeatedly to set minute hand for the desired minutes.**

Timer operation


BUTTON "A": Start / Stop / Restart.

BUTTON "B": Reset.

- Warning beep: Beeps for 5 seconds when the time is up.
- To stop it, press **BUTTON "A"** or **"B"**.

**Hand moves quickly if the button is kept pressed.

SEIKO

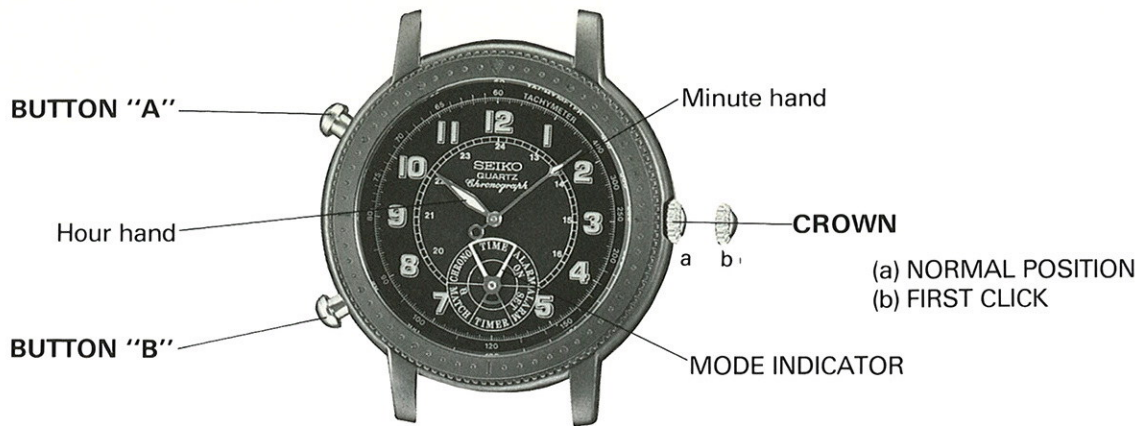

■ OPERATION AFTER THE BATTERY CHANGE

CROWN:

1. Turn at NORMAL POSITION to set MODE INDICATOR to "∅ MATCH".
2. Pull out to FIRST CLICK.

BUTTON "A" & BUTTON "B": Press continuously at the same time for 3 seconds. A beep sounds when the buttons are released, and the hands start to move automatically.

BUTTON "A" or BUTTON "B": Press to stop the hands.

BUTTON "A": Press to reset minute hand to the 12 o'clock position.**

BUTTON "B": Press to reset hour hand to the 12 o'clock position.**

** Hand moves quickly if the button is kept pressed.

CROWN: Push back into NORMAL POSITION.
 ● Then, set the time following the procedure in "Time setting".